

The number shown in each ➡ is the page number where the part's function and/or use are explained in Japanese.

Front view

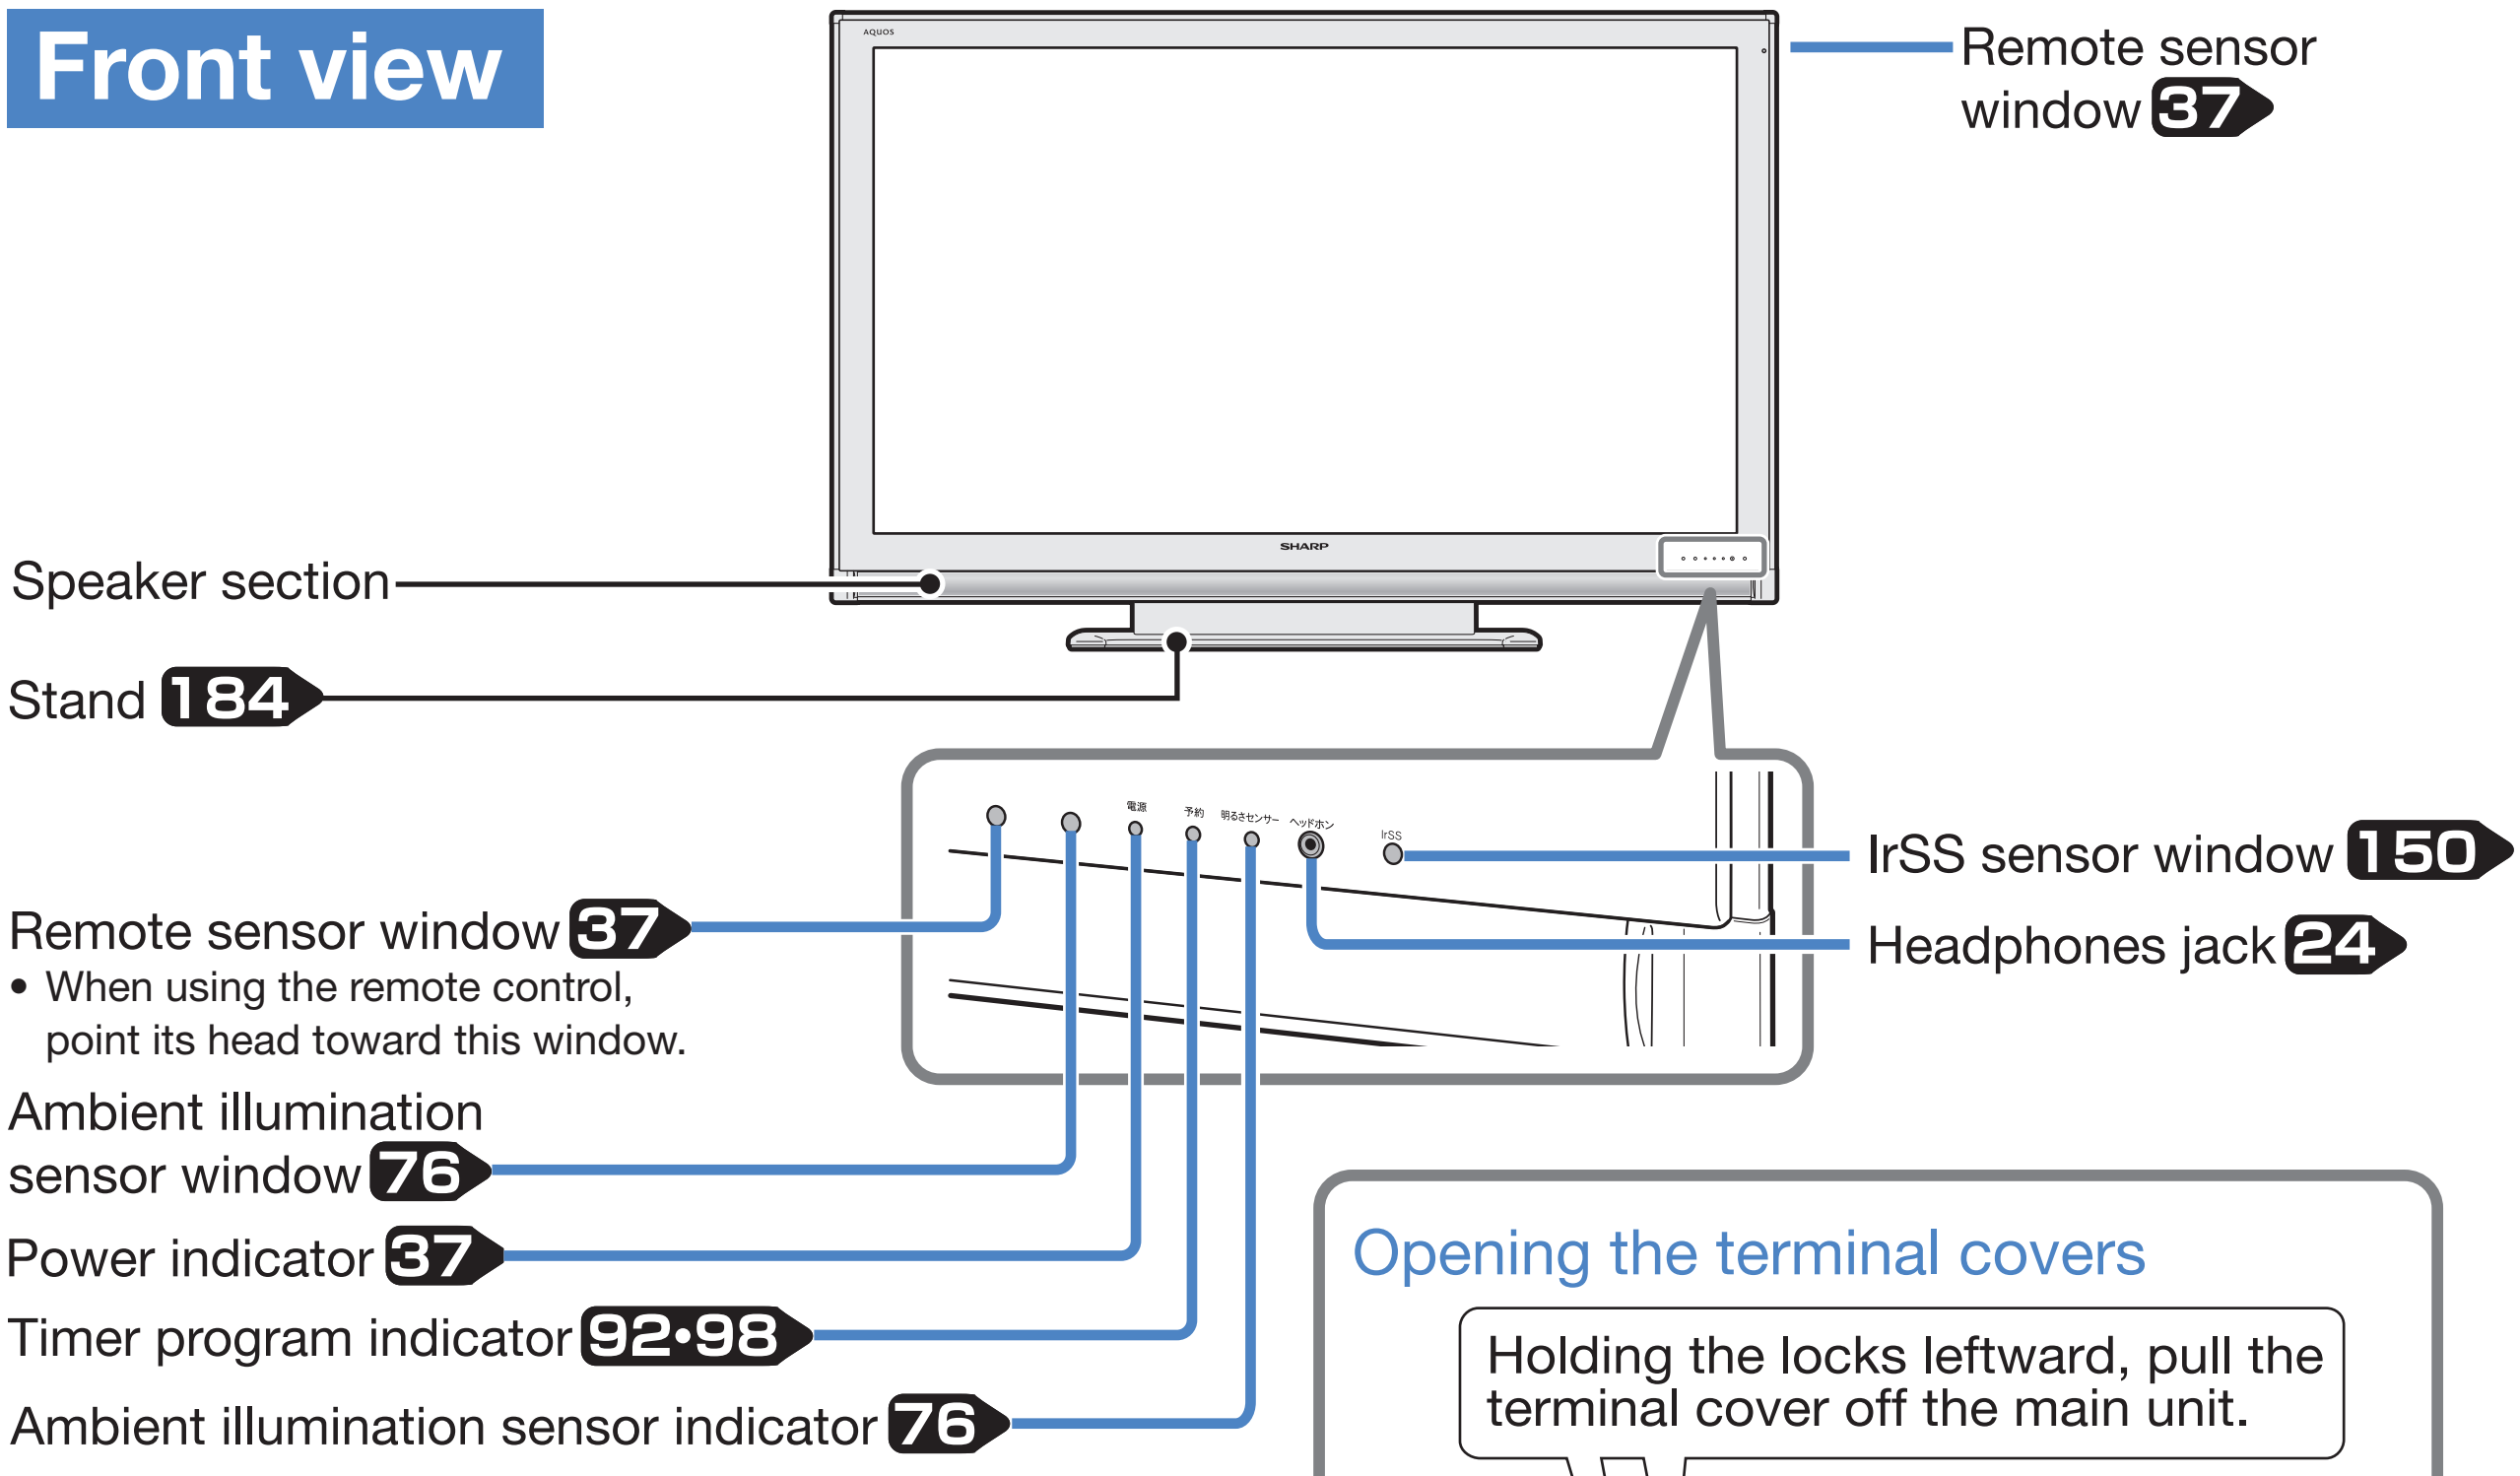


Opening the terminal covers

Holding the locks leftward, pull the terminal cover off the main unit.

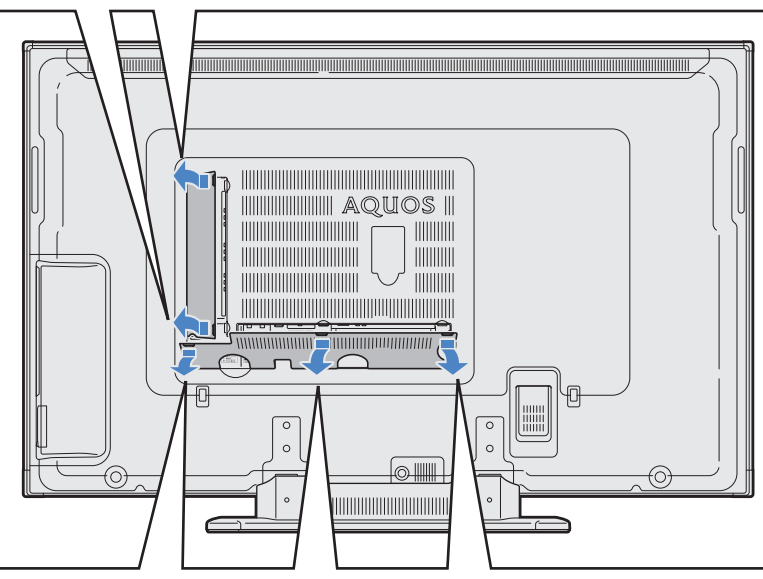


Holding the locks downward, pull the terminal cover off the main unit.

Side view

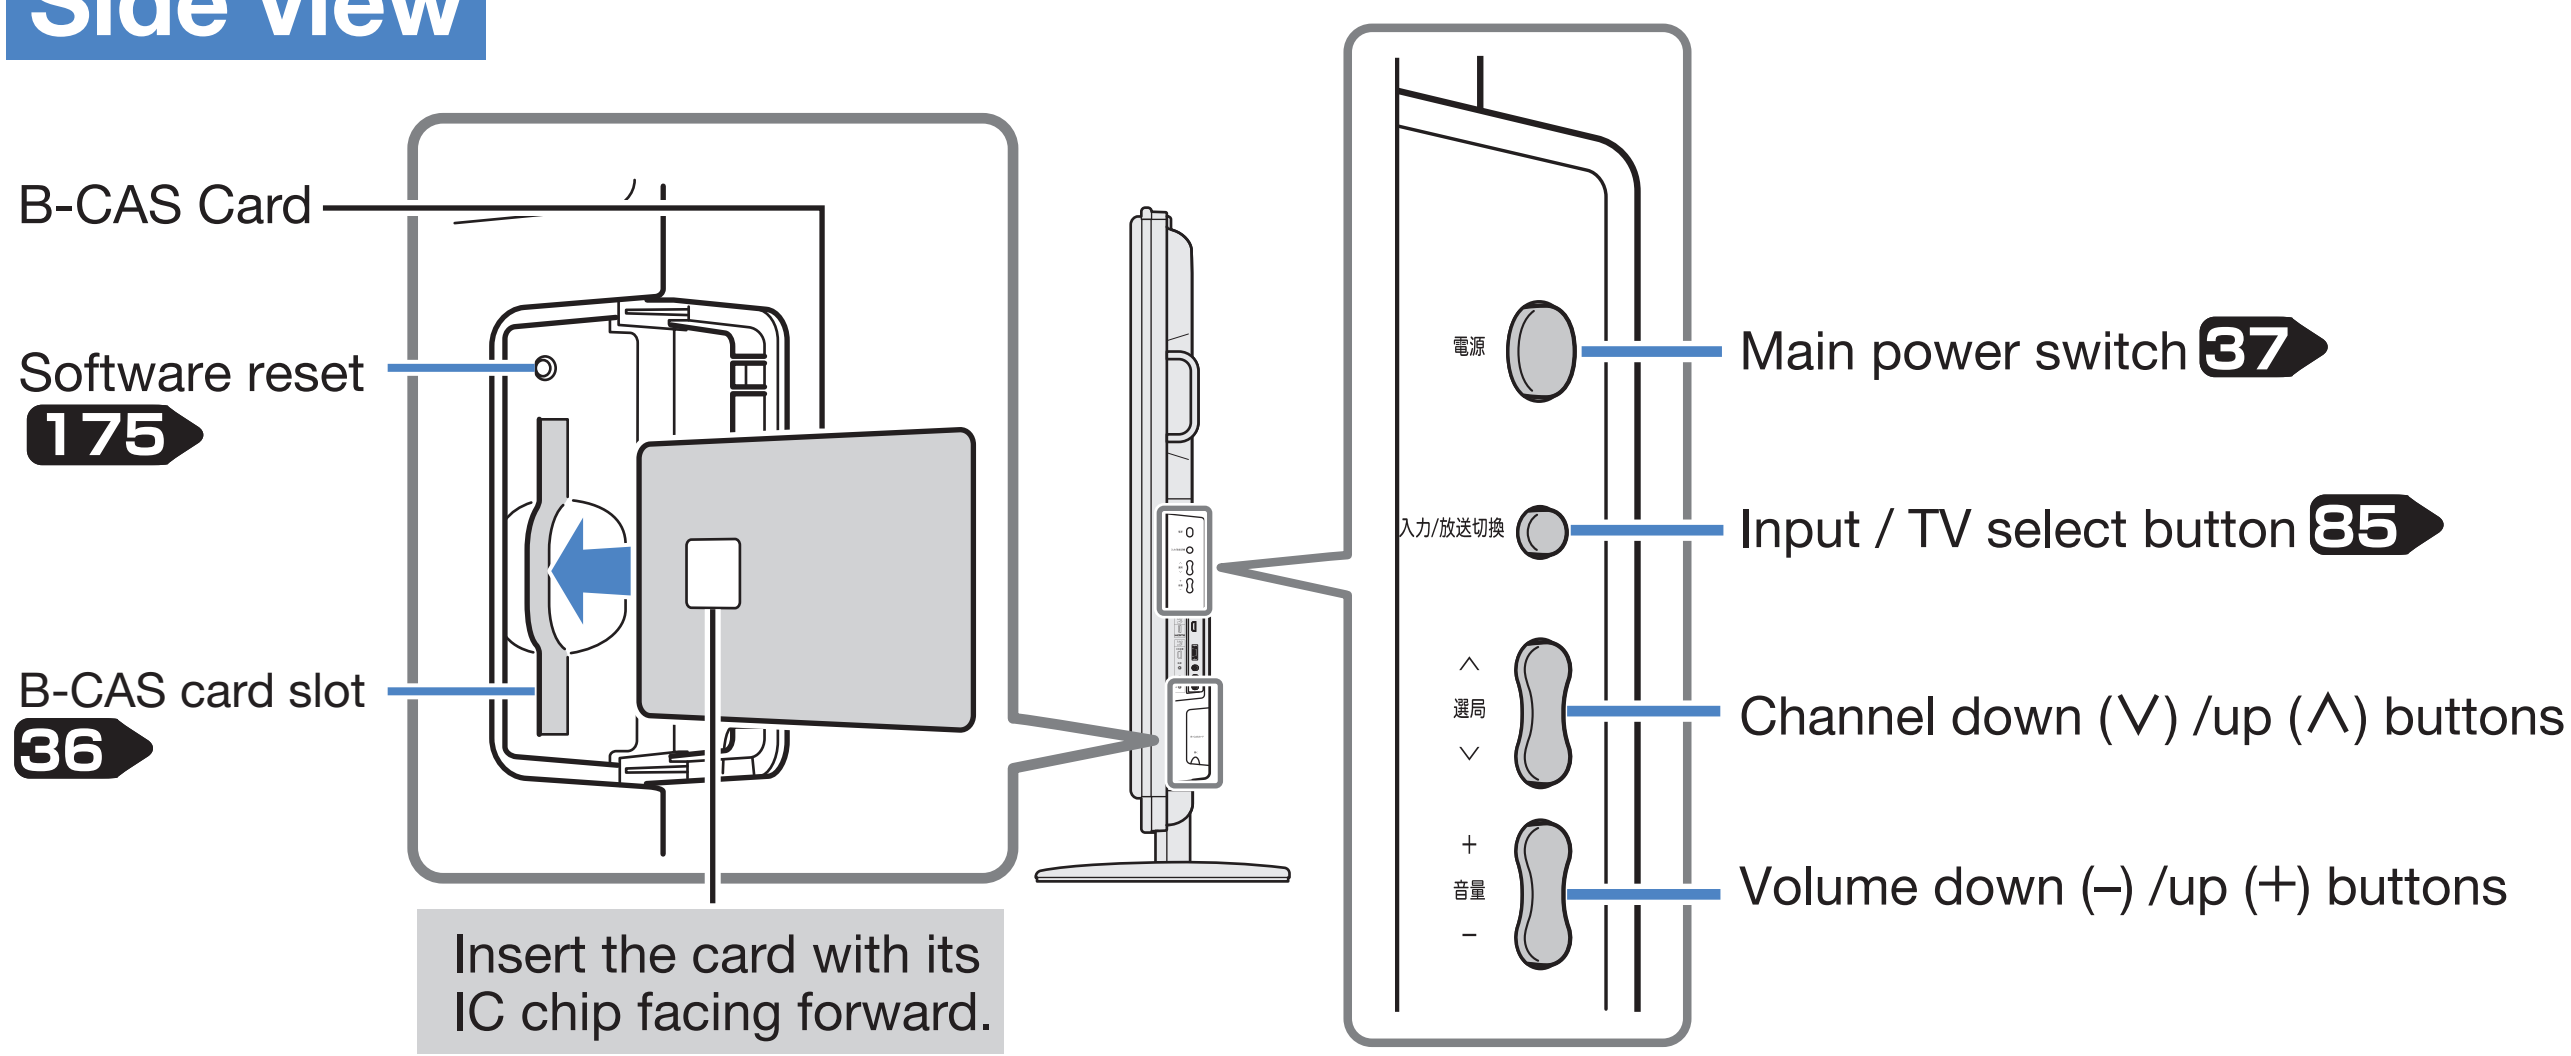

Back view

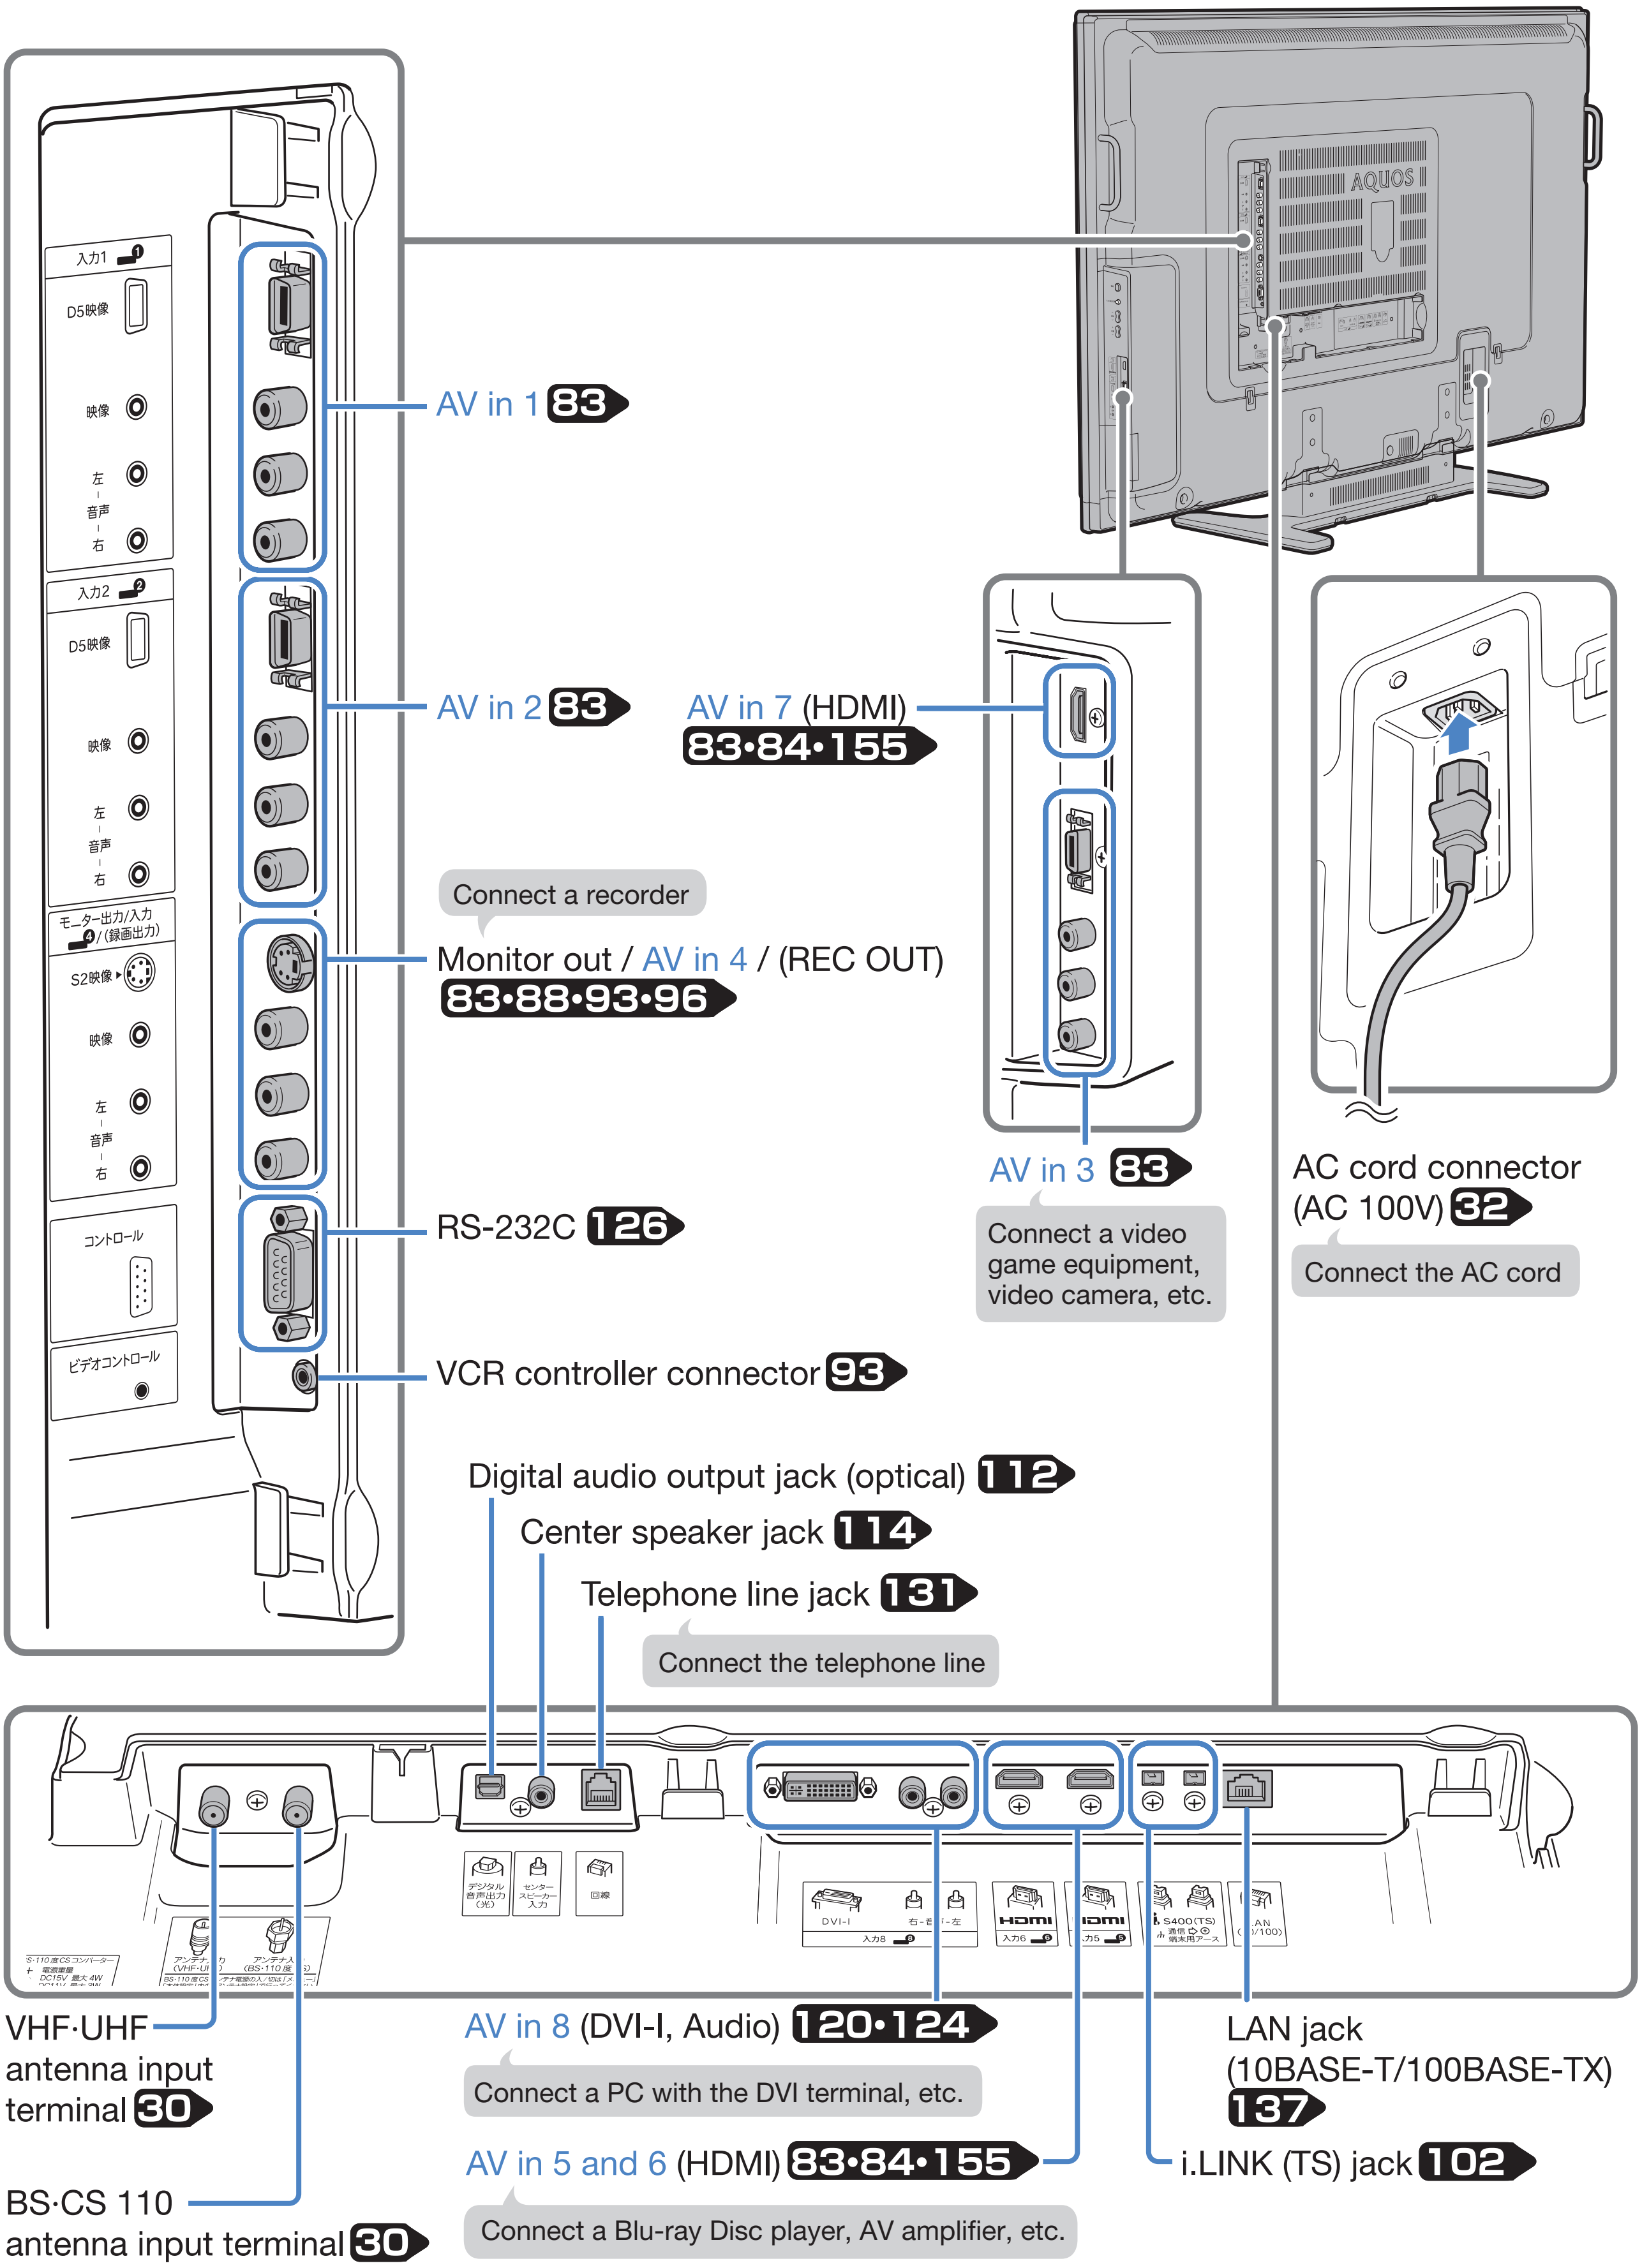
AV in 1 83
AV in 2 83
AV in 7 (HDMI) 83·84·155
Connect a recorder
Monitor out / AV in 4 / (REC OUT) 83·88·93·96
RS-232C 126
VCR controller connector 93
AV in 3 83
Connect a video game equipment, video camera, etc.
AC cord connector (AC 100V) 32
Connect the AC cord
Digital audio output jack (optical) 112
Center speaker jack 114
Telephone line jack 131
Connect the telephone line
VHF·UHF antenna input terminal 30
BS·CS 110 antenna input terminal 30
AV in 8 (DVI-I, Audio) 120·124
Connect a PC with the DVI terminal, etc.
AV in 5 and 6 (HDMI) 83·84·155
Connect a Blu-ray Disc player, AV amplifier, etc.
LAN jack (10BASE-T/100BASE-TX) 137
i.LINK (TS) jack 102

Part Names – Remote Control Unit

Active/Standby 37
Press to engage the TV set in the active or standby mode.

Display 58
Press to display or turn off the channel call, etc.

Familink 154
Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Terrestrial analog select 58
Terrestrial digital select 58
BS select 58
CS select 58
Select the CS digital channel for the first time. 35

ⓓ (linked data broadcast) 70
Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (–)
Press to adjust the volume.
Mute
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.


Program info 70
Press to display detailed information on the current digital program.
EPG 62
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
Other on-air programs 62
Press to display the EPG for currently on-air programs only (裏番組).

Finish 38
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.


Screen mode 72
Press to select the desired screen mode.
AV mode select 74
Press to select the picture/sound setting that best matches the current program.
Freeze 69
Press to freeze the picture.

i.LINK 104
Press to display the i.LINK control panel.
Favorite channel select/register 59
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink 154
Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

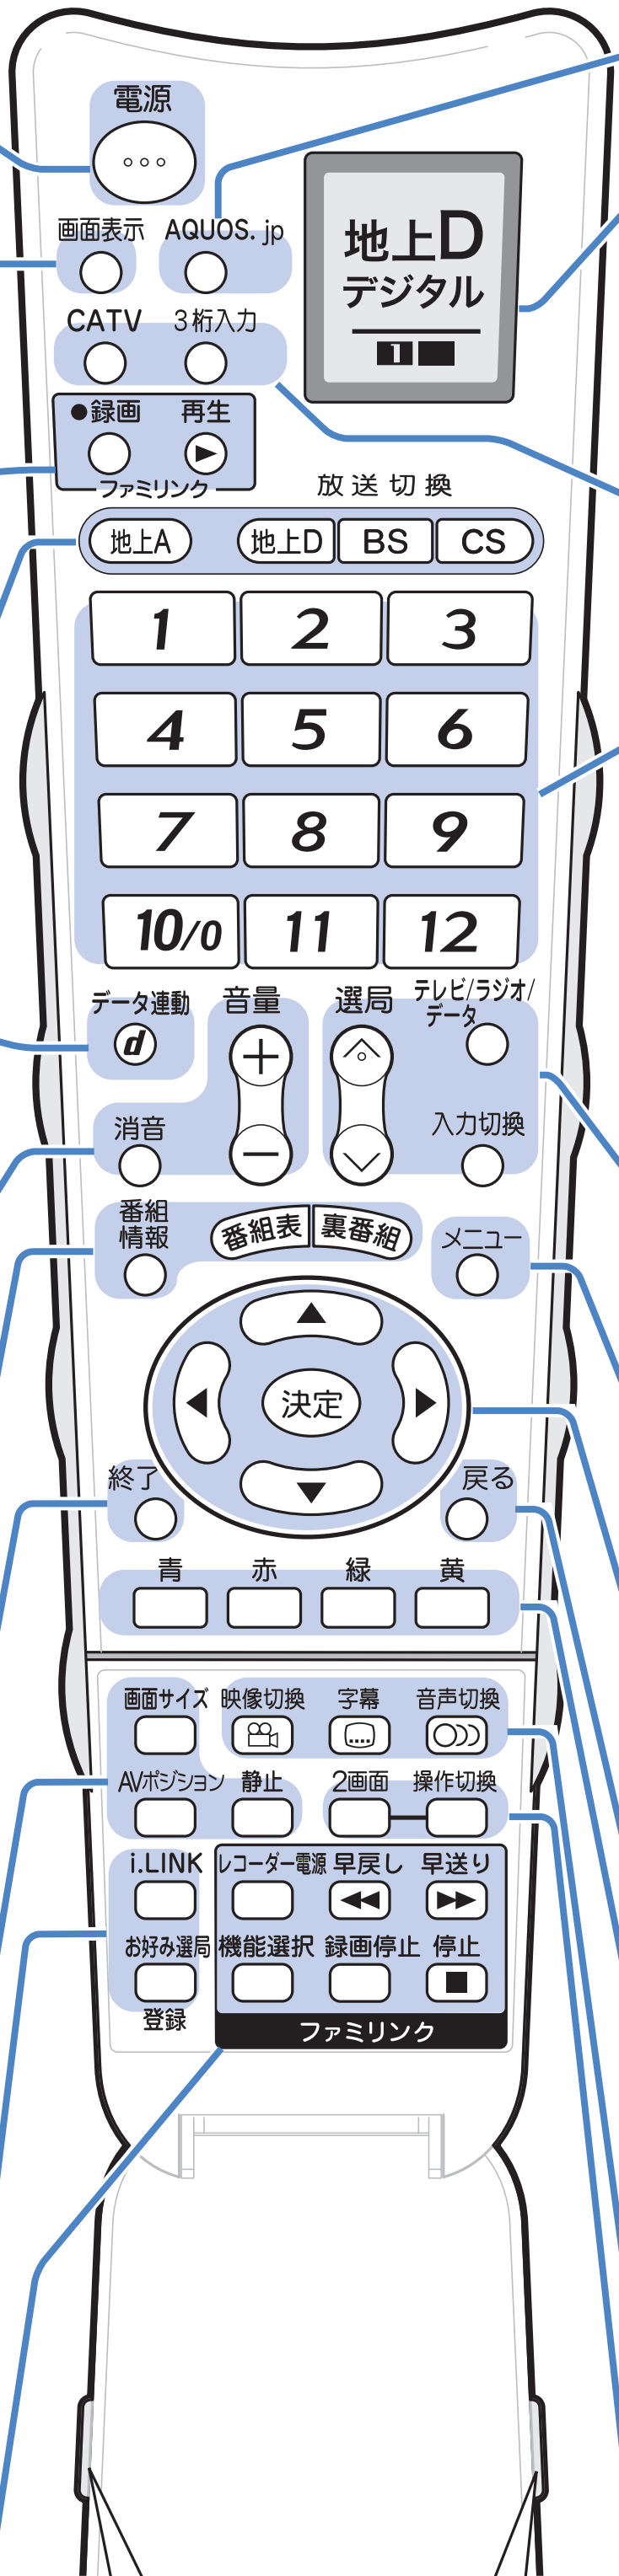

To open the cover
Hold the cover by the projections on both sides and lift upwards.

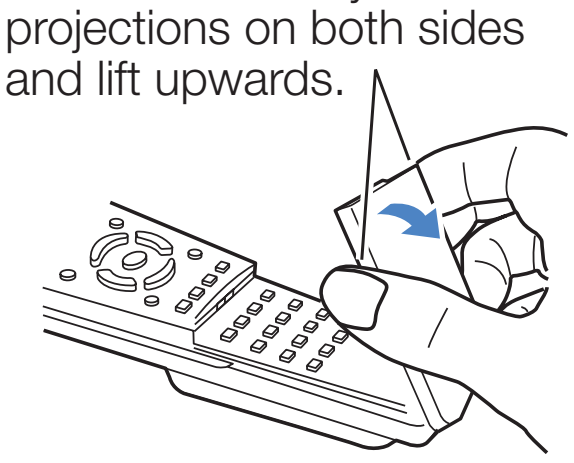

AQUOS.jp 140
Press to connect to the internet.

LCD display window 58

CATV 59
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).
Digital channel number input 59
Use to select a digital channel by entering the 3-digit channel number.

Channel select 58
- Press to select a channel.
- Use to input a number for various settings.

Channel up (∧)/down (∨) 58
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.
Media select 58
Press to select the desired media (TV, radio, or data).
Input select 85
Press to select the desired input.

Menu 38
Press to display or turn off the menu screen.
The menus can be displayed in English. See 195 for instructions on how to switch the display language.

Cursor (up, down, left, right) 38
Use to select a menu item, column, etc.
Enter/Confirm 38
Press to confirm a selected setting or menu item.

Return 38
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 64 • 65 • 70
Use to operate EPGs and data program screens.


Picture select 67
Press to select the desired picture when watching a digital multi-picture program.
Caption 67
Press to display, select, or turn off captions when watching a digital program with captions.
Audio select 66 • 67
Press to select the desired audio.

Split screen 68
Press to switch between the split screen mode and the normal screen mode.
Operable screen 68
Press to switch the operable screen when the TV set is in the split screen mode.

Switching the Display Language to English
メニューなどの言語を英語にする

Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

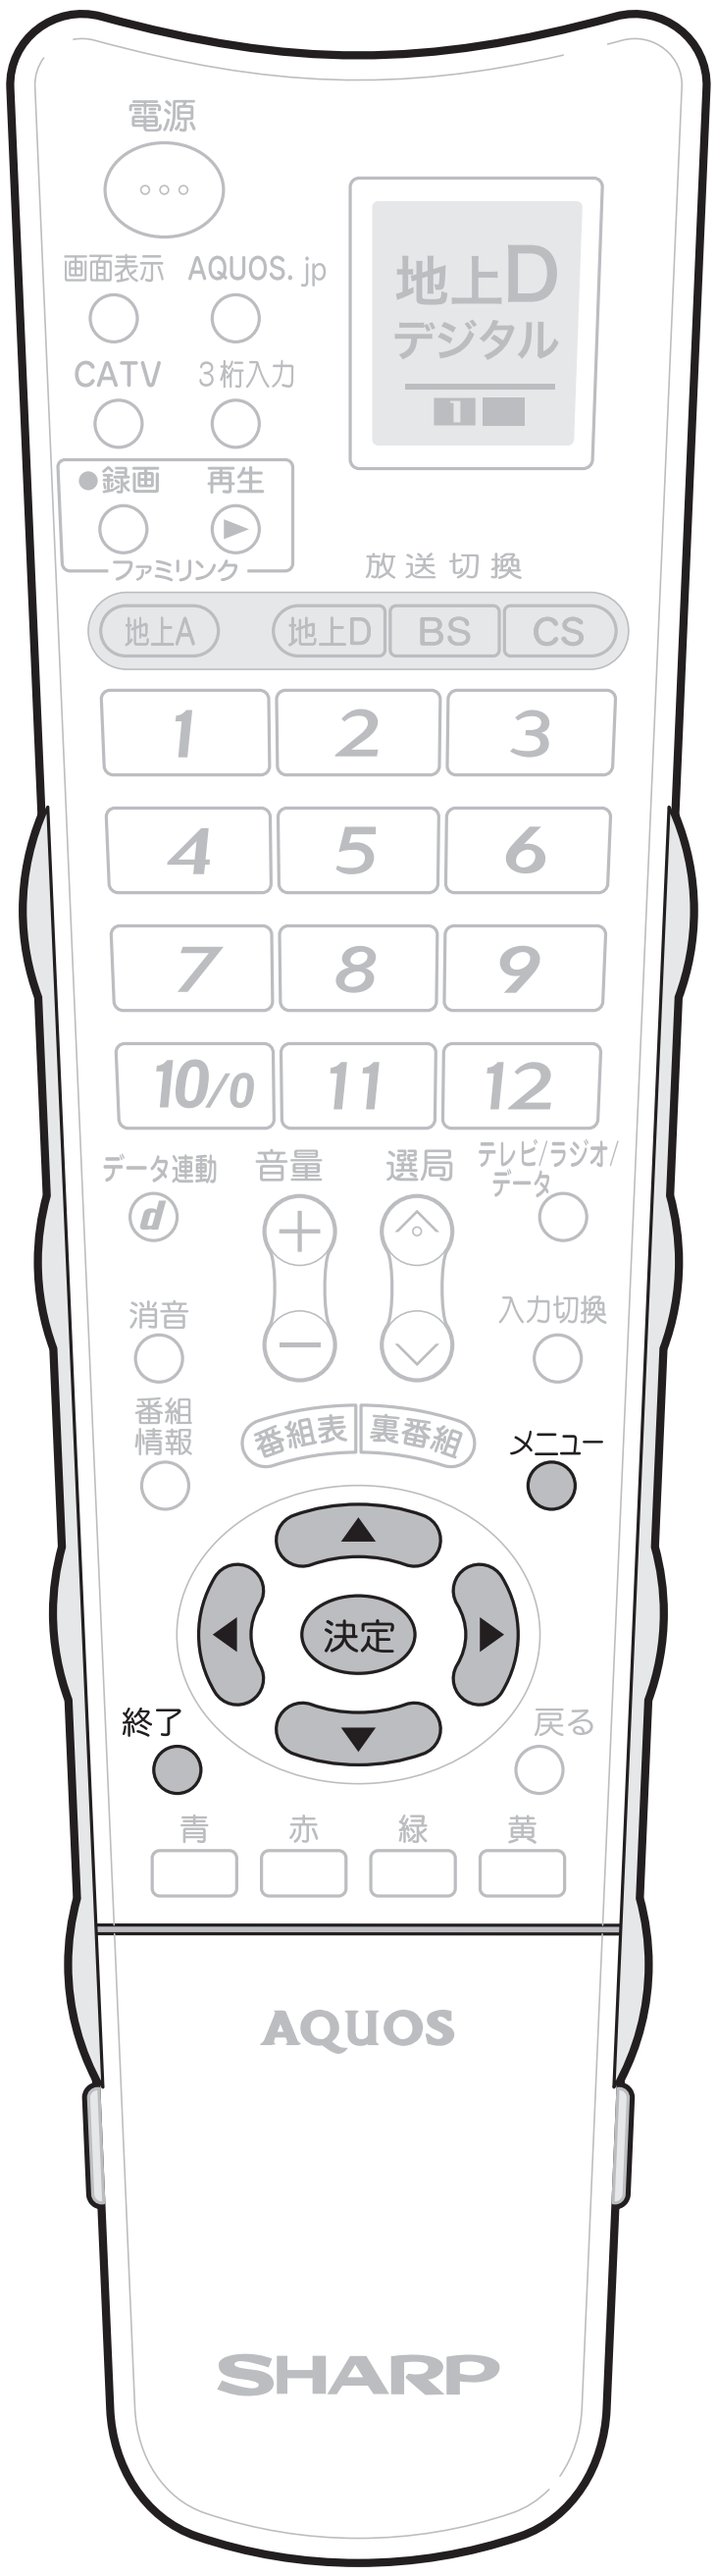

★おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

Press


1 メニュー

Display the menu screen.
メニューを表示する

2

Select “ 本体設定 ”(Setup) ー “Language (言語設定)”.
「本体設定」－「Language（言語設定）」を選ぶ


決定 Enter.
決定する

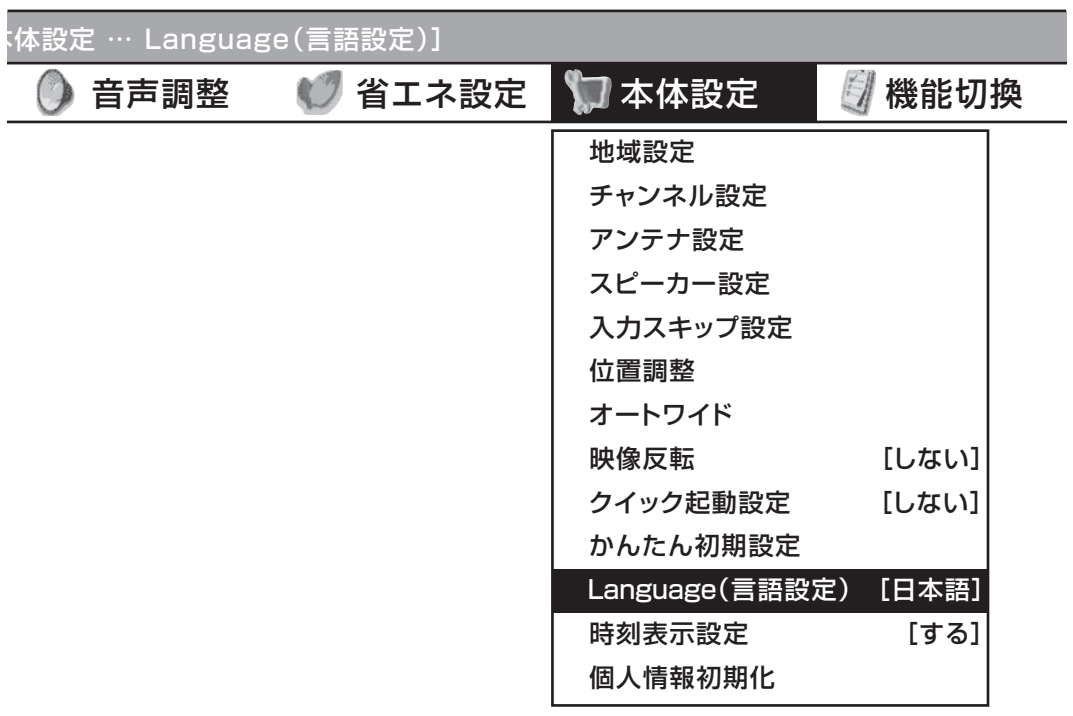

3

Select “English”.
「English」を選ぶ

決定 Enter.
決定する

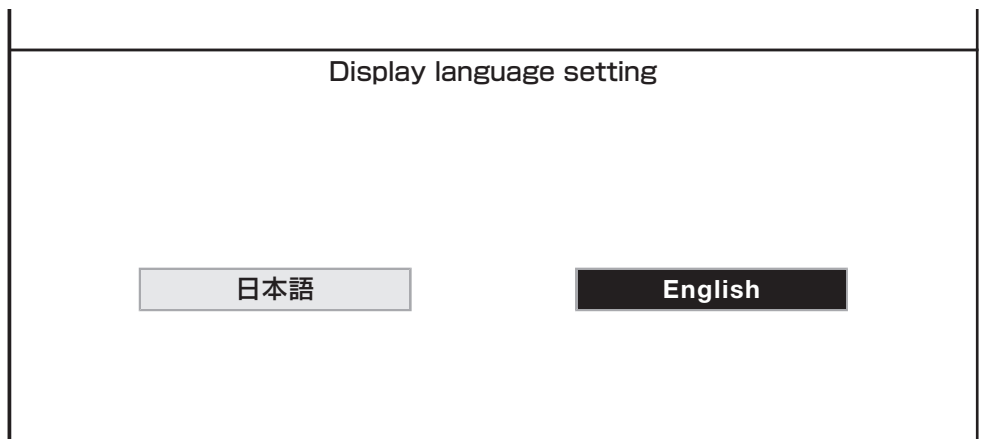

- The menu screen is now displayed in English.

  画面表示が英語になります。

4 終了

Finish this operation.
終了する